

Classic Gate

Installation Instructions



909910

1. Before Starting: Make sure hinge and latch post are structurally sound to carry the weight of the gate. **Any Gate over 48" in width** must have support to keep Gate from sagging. With post plumb, make sure spacing between **wood posts** (before installing vinyl sleeves) is 2" greater than Gate size. *Example: 34" Gate + 2" (before vinyl sleeve) = 36"* (2 3/4" for Double Gates. *Example: 34" Gate + 34" Gate + 2 3/4" = 70 3/4" R/O*)


2. Set Gate in Opening: Set Gate in opening to determine the mounting location. Center Hinge with the horizontal rail of Gate and mark screw mounting holes on **post**. Pre drill 8 (eight) 5/32" holes. **With arrow on hinge barrel pointing up**, hold hinges in place and install #10 x 1 1/2" s.s. screws.

3. Install Gate to Hinge: With hinges mounted to post, set gate in opening and adjust to desired height. Leave a 3/4" gap between post and gate and mark mounting holes on hinge. Drill a 5/32" hole and install 8 (eight) #10 x 1 1/2" s.s. screws. With screws installed, check the 3/4" gap between post and gate.


4. Install Self-Closing Latch: With Gate hinged in place, you should maintain a 5/8" to 3/4" gap between post and latch side of gate. Next open Latch Hardware (#LL2ABG) and follow instructions on how to install the Latch assembly. You may also adjust the **tension** on the spring-loaded hinges by removing the cap on top of the barrel of the hinge and turning clock or counter clockwise.

Notes:


- Gate panels over 48" in width require a support roller. Double gates over 96" wide, with equal size panels, will require 2 (two) support rollers. You must have support on bottom corner of latch side to prevent gate from sagging. You may use a caster or roller (not supplied) sold at most local hardware stores.
- Double Gates will need a Drop Rod assembly to provide a Latch point for your Gate.
- External access latch suggested for all gates over 48" high. Optional gate handle is also recommended.
- Always install gates on structural posts.

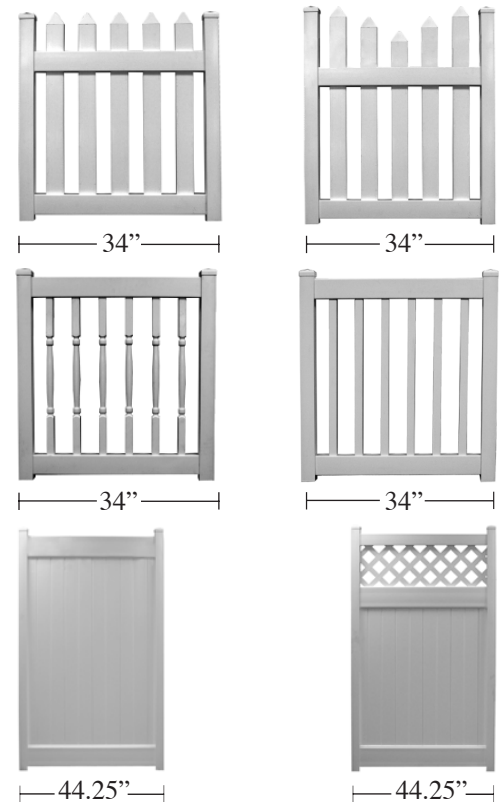

Fence

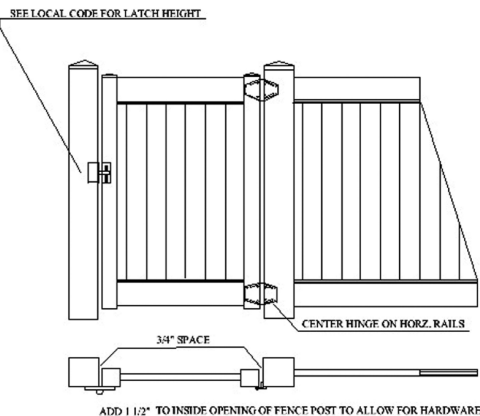

DOUBLE GATE



NOTE: Gate Panels over 48" in width must have support on bottom Latch Side
Double Gates must have one panel secured (drop rod) to latch Gate

Railing

